EVAPOLLO



User Guide EN

Your EV Apollo is just the beginning.

For an even deeper level of cleaning and hygiene, discover our choice of EV steam cleaners:

EV Atlantis
EV Poseidon
EV Atlas
EV Iris Pro

Designed to work perfectly with the EV Apollo, they use the power of steam to disinfect, degrease and improve your cleaning results - without the need for cleaning chemicals.

Optimize your cleaning routine today with the complete EV solution.

Further information can be found at: **www.ev-international.com** or use the QR code below:

EV APOLLO

IMPORTANT SAFETY INSTRUCTIONS:
READ THESE INSTRUCTIONS BEFORE COMMISSIONING

Before operating the EV APOLLO-room cleaning system, please read all instructions carefully. Your EV APOLLO-room cleaning system may only be used for the purposes described in these operating instructions. The use of additional devices that are not recommended by the manufacturer can be dangerous.

1. Always disconnect the power plug first before cleaning and drying the EV APOLLO room cleaning system.
2. Never use the EV APOLLO room cleaning system without the separator.
3. Never use the EV APOLLO room cleaning system without water.
4. In case of heavy contamination, please change the water in time.
5. Clean the EV APOLLO room cleaning system and the separator at regular intervals.
6. Only operate the EV APOLLO room cleaning system under supervision. Children (under 8 years of age) and persons unfamiliar with the operation should be kept away if possible.
7. The EV APOLLO room cleaning system must not be used to vacuum materials that do not form a bond with water. Do not use the EV APOLLO to vacuum up large quantities of mineral dust, soot, gypsum, construction debris, etc. Do not vacuum up concentrated amounts of dust.
8. Never vacuum up flammable liquids!
9. Avoid vacuuming sharp-edged or hard objects.
10. Do not vacuum up cigarettes, matches, ashes and other smoking or burning objects.
11. Never use the EV APOLLO room cleaning system with a damaged power cord.
12. Do not set the EV APOLLO Room Cleaning System down with the power cord connected.
    Always disconnect the main plug from the socket and switch off all operating elements beforehand if the machine is to be shut down for a longer period of time or during maintenance work.
13. Observe the manufacturer's operating instructions and warnings and only use approved original accessories.
14. The manufacturer declines all responsibility for damage resulting from improper use or use contrary to the instructions, unauthorised repairs or improper maintenance.
15. Do not hold it in water for cleaning.
16. The electric nozzle hose must be checked regularly and must not be used further in the event of a defect.
17. The electric nozzle contains electrical connections. The electric nozzle can only be operated with electricity.
18. Please be careful not to pinch your fingers when using the power nozzle.

ADDITIONAL SAFETY INSTRUCTIONS

This device can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the device in a safe way and understand the hazards involved. Children are not allowed to play with the device. Cleaning and maintenance by the user must not be carried out by children without supervision. If the power supply cord of this device is damaged, it must be replaced by the manufacturer or its customer service or a similarly qualified person in order to avoid hazards.



NOTE ON ENVIRONMENTAL PROTECTION

At the end of its service life, this product must not be disposed of with normal household waste, but must be taken to a collection point for the recycling of electrical and electronic equipment.
The materials are recyclable according to their labelling.
By reusing, recycling or otherwise recovering old equipment, you are making an important contribution to protecting our environment. Please ask your local authority for the responsible disposal point.

Attention

To avoid electric shocks, do not expose it to rain! Do not store or use outdoors!

Type household



DOUBLE INSULATED

EV APOLLO

Dear EV APOLLO customer!

We would like to congratulate you for your **EV APOLLO room cleaning system**.

You have purchased a product that combines technical perfection and functionality with high ease of use and modern design.

You should read the tips and instructions in this operating manual carefully in order to enjoy your **EV APOLLO room cleaning system** for a long time.

Please note the serial number of your **EV APOLLO** here.
This can be found under the handle on the device itself.



This representation of the label serves only as an example.

CONTENT OVERVIEW

Seite

Safety instructions . . . . . 24 - 25

General description . . . . . 28 - 29

Standard accessories 31

Preparation 32

Basic functions

Air wash 33

Cleaning with the standard accessories . . . . . 34 - 35

More functions

Blow function 35

Vacuuming 35

Timer 36

Wet vacuuming 36

Care instructions 37

Accessories

Electric nozzle . . . . . 38 - 39

GENERAL DESCRIPTION



Technical data


Type	EV APOLLO
Voltage	220 - 240 V | 50/60 Hz
Power	three power levels - max. 650 watts
External dimensions	approx. 38 x 35 x 45cm (L x W x H)

EV APOLLO

BASIC DEVICE



1. Control panel with on/off switch and motor regulation
2. Timer
3. Socket
4. Motor head
5. Separator (left-hand thread)
6. Fastening nut
7. Water tank
8. Carrying handle
9. Closure flaps
10. Removable cover for the suction nozzle
11. Chassis
12. Tank unlocking device
13. Air outlet grille for sliding (rear side)
14. Flap storage (back side)

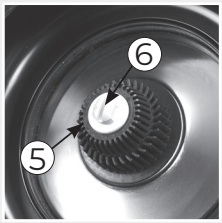





STANDARD ACCESSORIES

















1. Switchable floor nozzle
2. Upholstery nozzle
3. Suction hose
   incl. air regulation (3b)
4. Furniture brush
5. Accessory holder
6. Crevice nozzle
7. Separator tool
8. Stainless steel
   telescopic tube
9. Sleeve
10. Parking holder

PREPARATION



1. Fill the water tank with approx. 2.5 - 3 litres of cold water so that the suction unit is slightly covered (Fig. 1). This is the amount of water your room cleaning system needs for all functions.
2. Make sure that the separator is properly attached.

NOTE:
The suction unit must be slightly covered with water during each operation.

INSERTING THE WATER TANK CORRECTLY IN THE CHASSIS









1. Now reinsert the filled water tank into the chassis by first engaging the tank diagonally at the rear (Fig. 2). Make sure that the tank is correctly positioned under the nose (Fig. 3).
2. Now you can push the water tank down at the front (Fig. 4).

NOTE:
Always insert the tank in the rear of the chassis first, otherwise the chassis may be damaged! (Fig. 2-4).

FASTENING THE MOTOR HEAD TO THE WATER TANK

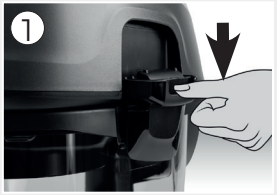

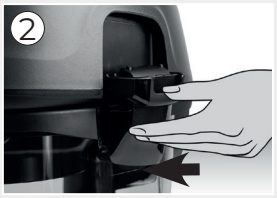



1. Place the motor head on the water tank (Please listen for a soft clicking sound when the motor head is placed on the water tank, this will ensure that the motor head is seated correctly. If no click is heard, please repeat the procedure.).
2. First press the upper buckle completely down (Fig. 1). Now hold the lower part against the water tank so that it can snap into place when closing (Fig. 2).
3. Now close the upper buckle until you hear a CLICK (Fig. 3).

NOTE:
Close the buckle first DOWN then UP (Fig. 1-3).

BASIC FUNCTIONS OF THE EV APOLLO



Air wash


Place your EV APOLLO in the room and let it run for a few minutes, depending on the size of the room. Your EV APOLLO now vacuums up all unpleasant odours and dust particles from the room air, binds them in the water and the freshly washed air exits through the air outlet grille (Fig. 4).



According to taste, you can add a few drops of fragrance oil to the water in the tank. After a short time, your rooms will be filled with a pleasant scent.

Recommended setting for a pleasant air wash: “MIN” (Fig. 5)

HOW TO USE THE STANDARD ACCESSORIES

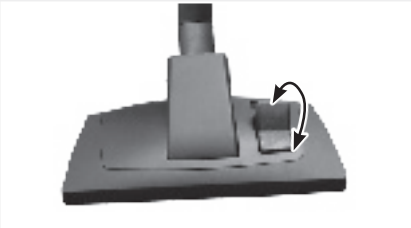

Switchable floor nozzle

The switchable floor nozzle is particularly suitable for thorough and gentle cleaning of smooth surfaces and carpets.




Upholstery nozzle

The small and proven attachment for all soft and scratch-resistant surfaces (e.g. upholstery, curtains, etc.). It allows flat vacuuming in hard-to-reach places without lacking the required handiness.




Furniture brush

The furniture brush is suitable for cleaning plants and other sensitive items. Place the furniture brush directly on the handle and open the air control to enable particularly gentle vacuuming.

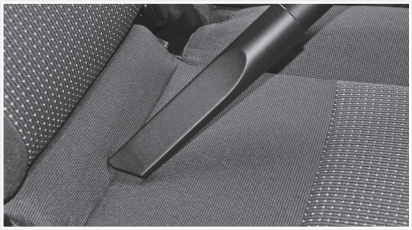

Crevice nozzle

This attachment makes it easier for you to clean hard-to-reach places that were previously difficult to reach.

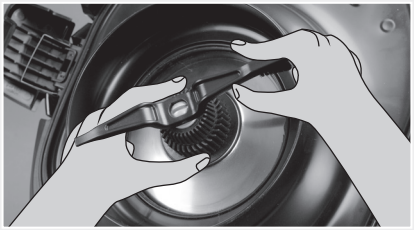

Cleaning key

The wrench is used to loosen the screw from the separator slightly so that the separator together with the screw can be removed and cleaned (ATTENTION: left-hand thread).



Parking holder

With the help of the sleeve, which is plugged onto the telescopic tube, the telescopic tube can be ideally placed in the parking bracket and thus also parked.



Accessory holder

The accessory holder can be attached to the rear of the chassis. This means the most important accessories and attachments are always at hand.

MORE FUNCTIONS



Blow function

Ideal for blowing through clogged drains or drying items. Open the air outlet grille at the rear and attach the suction hose at this point (Fig. 1).



Vacuuming

Place the items to be cleaned, such as pillows, comforters, stuffed animals, etc., in the vacuum bag, attach the upholstery nozzle, switch on the EV APOLLO and vacuum the air completely. Now remove the hose and attach it to the air outlet (blowing function). Now blow fresh air into the vacuum bag - everything smells fresh and clean again! (Fig. 2)


IMPORTANT:
The EV APOLLO must not be switched off during vacuuming.



Timer / Delayed switch-on

Function:
- Press the start button and press the timer button as many times as desired.
- Each backlit corner on the timer display represents 15 minutes of run time. Thus, you can choose between 15, 30, 45 and 60 minutes duration.

NOTE:
If you only press the timer button without switching on the EV APOLLO before hand, the timer functions as a countdown until the automatic delayed switch-on.

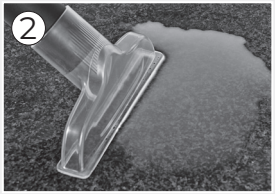





Wet vacuuming

For wet aspiration, start with an empty water tank and aspirate the water with the EV APOLLO dry hose (Fig. 2).

Make sure that the water tank is not overfilled!

After each wet aspiration, the hose must be cleaned and dried. To do this, suck in clean water, then attach the hose to the air outlet and insert the handle piece into the suction socket. Now let the EV APOLLO run for approx. 2 - 3 minutes and thus blow the hose dry (Fig. 3).

Subsequently, it can be used again for all other work. Recommended setting for wet vacuuming of the EV APOLLO: “MAX” (Fig. 4).

NOTE:
Do not use the power nozzle and power hose (accessories) to suck up water!

CARE INSTRUCTIONS





Please follow these instructions:

1. First disconnect the power plug.
2. Empty the dirty water from the water tank, then clean the water tank with the special EV APOLLO cleaning cloth.
3. Clean the bottom of the motor head with the special EV APOLLO cleaning cloth (damp) and dry it.
4. Remove the screw and the separator, clean it thoroughly and put it back on. Make sure that the separator engages correctly in the guide notch and secure it with the nut.
5. Do not close the closing flaps. Slightly lift the carrying handle of the wash tank and bring it into the drying position (Fig. 1). This allows the remaining moisture in the tank to circulate with the outside air and dry off optimally.
6. By simply pushing down the motor head, the EV APOLLO is quickly ready for the next use (Fig. 2).

IMPORTANT:
Never place your EV APOLLO room cleaning system filled with water or in a damp state.

EV APOLLO

SPECIAL ACCESSORIES ELECTRIC NOZZLE POWERBRUSH

Technical data

Voltage	230 V | 50 Hz
Power	150 Watt



Recommended setting for vacuuming with the power nozzle: “CLEAN” (Fig. 1).

1. Electric nozzle (only suitable for dry vacuuming)
2. Telescopic tube for electric nozzle (stainless steel)
3. EV APOLLO electric hose (two-tone, only suitable for dry vacuuming)



ATTENTION:
Please use the EV APOLLO electric nozzle and the electric hose only for dry vacuuming!

BASIC FUNCTIONS OF THE ELECTRIC NOZZLE

Using the electric nozzle

The EV APOLLO Power Nozzle is particularly suitable for the care of heavily used carpets and rugs (e.g. for walkways), but also for upholstery and mattresses. Of course, the EV APOLLO electric nozzle can also be used to vacuum hard floors. When vacuuming sensitive or damaged mattresses or toppers, use the Powerbrush mattress protector as an insert for the electric brush and leave a bed sheet on the mattress or topper for further protection.

Switch off your EV APOLLO room cleaning system. Plug the cable of the electric hose into the connection provided for this purpose (see components).

Switch on the EV APOLLO. Operate the release mechanism and bring the telescopic tube into an inclined position. The motor now starts automatically. If the telescopic tube is returned to a vertical position, the motor switches off.

Electric nozzle overload protection

If the motor is overloaded, e.g. if the brush roller is blocked by vacuumed, bulky foreign objects or wrapped carpet fringes, a resettable overload protection automatically switches off the motor for your safety.


This will turn on the red warning light. If this should happen, please proceed as follows:

- Switch off the Power Nozzle and disconnect the mains plug of the EV APOLLO room cleaning system from the socket.
- Eliminate the cause of the fault, clean the brush roller if necessary.
- You can then put the electric nozzle back into operation.

CARE OF THE ELECTRIC NOZZLE

1. Disconnect the power plug of the nozzle.
2. Remove any trapped hair and carpet fibres with the crevice nozzle.

Maintenance

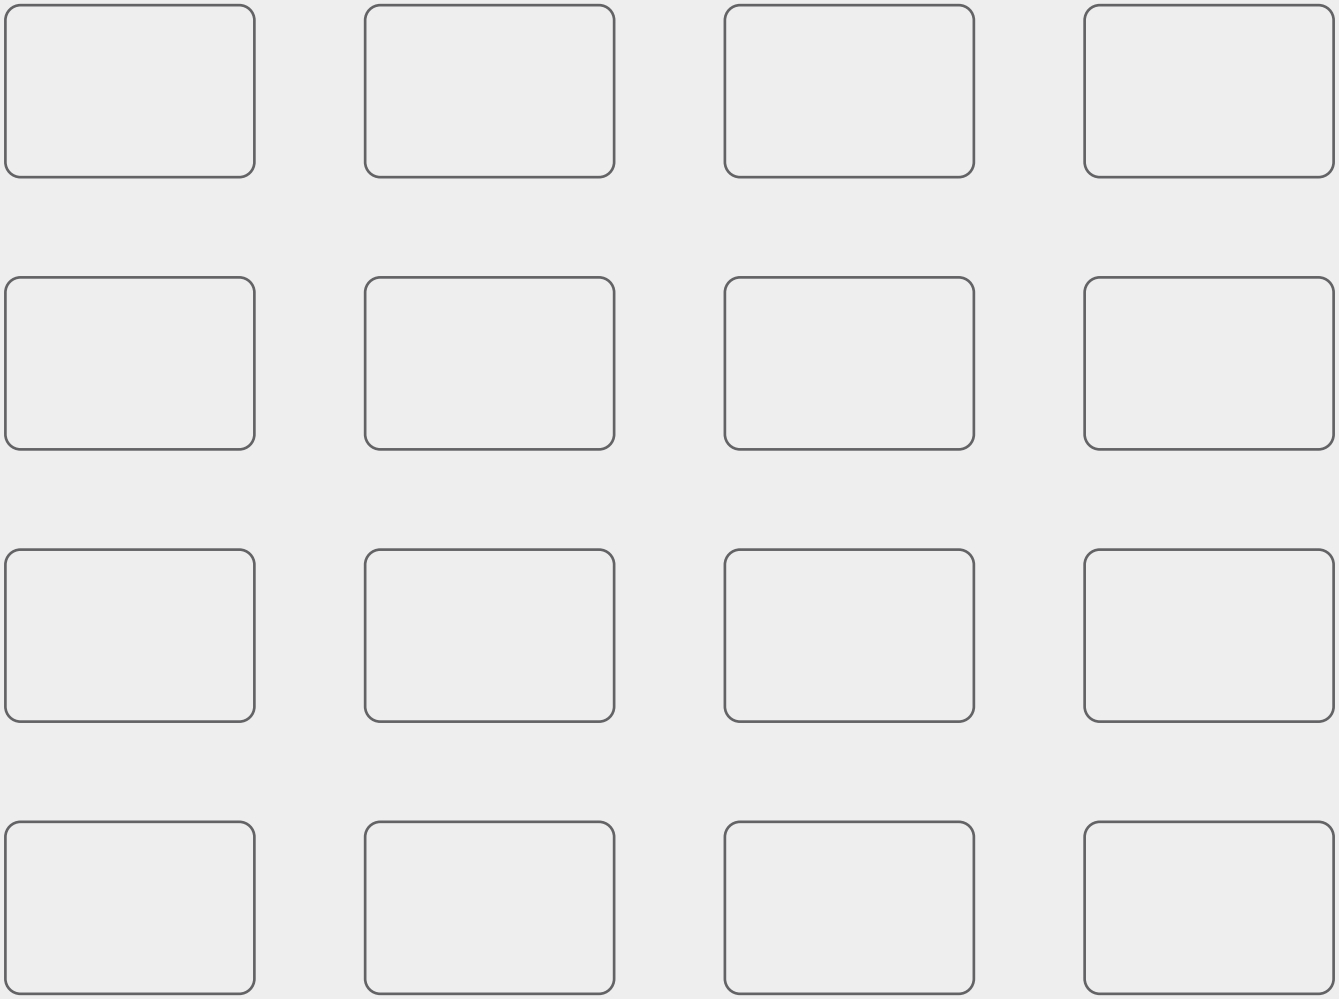


EVAPOLLO

EVAPOLLO



E V International Ltd.®
office@ev-international.com

www.ev-international.com

Made in Germany